



## Product Configuration

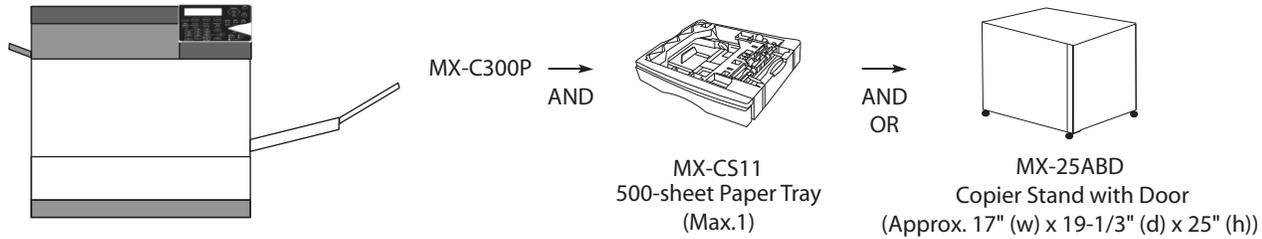

## Space Requirements and Planning Guide

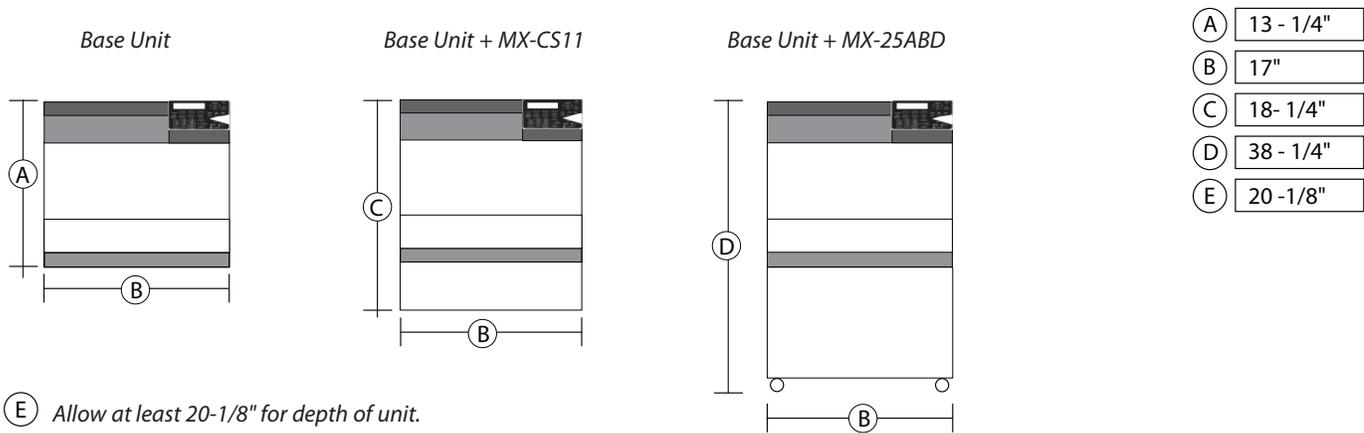

Plan ahead and make sure your installation is a great success! Remember to check the latest information on these products and make sure that the following items are available prior to installation.

- Verify power dedication and check for power stability. The MX-C300P Printer requires AC 120V, 60Hz power source. This device draws 9 amps (Requires 15A circuit breaker)
- Confirm that you have the latest firmware available to upgrade the MX-C300P immediately.
- Make sure the customer has enough supplies on-hand to do a large rush job. After-hours printing and/or holiday work may take place immediately following an installation.

MX-C30NTB      Black Toner Cartridge  
 MX-C30NTC      Cyan Toner Cartridge  
 MX-C30NTM      Magenta Toner Cartridge  
 MX-C30NTY      Yellow Toner Cartridge

- Check to see if My Sharp™ online training is set up for the end-user.

### Approximate Dimensions with Tray and Cover Open

