

KONICA MINOLTA

PARTS GUIDE MANUAL

JULY 2014

FK-511
A4MF

INFORMATION FOR PARTS GUIDE MANUAL

To find correct Parts No., refer to the "HOW TO MAKE THE BEST USE OF THIS MANUAL" in the following page.

HOW TO MAKE THE BEST USE OF THIS MANUAL

- 1 When you order, please check the proper figures beforehand that are on Our Parts Guide Manual, and order with the appropriate figures.
- 2 For screws, Nuts, Washers, retaining rings and Pins which are used in this model, one letter is shown on the Standard parts column of Parts list and exploded diagrams.
- 3 In order to maintain safety of the product, some specific parts composed of this product are set up as "essential safety parts".
- 4 The assigned parts number for the "essential safety parts" is indicated as "SP00-****".
When replacing these parts, follow precautions for disassembling and installing which are listed in the Service Manual.
Do not use any parts that are not set up as
- 5 ♣ means that there are exclusive parts for each destination.
Please check the appropriate destination when you order.
- 6 Revision Mark
Marked as ▲ on the illustration shows that the revision has been made.
- 7 All rights reserved. (any reprints or quotations are prohibited.)
Use of this parts guide manual should be strictly supervised to avoid disclosure of confidential information.

パーツガイドマニュアルのご案内

サービス部品をご発注の際には、下記に示す“パーツガイドマニュアルの活用にあたって”をご参照の上、正しい部品番号にてお願い致します。

パーツガイドマニュアルの活用にあたって

- 1 部品発注の際には、掲載されている部品番号の桁数を確認し、掲載されている桁数で発注願います。
- 2 この製品に使用されているネジ、ナット、ワッシャー、止め輪、ピンなどは、リストの右側の Standard parts 欄に a,b,c,……で表示し、イラストにも a,b,c,……表示してあります。
- 3 製品の安全性を維持する為に、製品に使用される特定の部品を「重要保安部品」として設定しています。
- 4 重要保安部品の部品番号は、“SP00-****”と記載されていますので、部品交換時は、サービスマニュアル記載の分解・組み立ての注意事項に従って作業をして下さい。
また、指定以外の部品は一切使用しないで下さい。
- 5 本文に ♣ が表示されている部品は、仕向け地毎に専用部品がある事を意味しています。
オーダーされる時は、仕向け地を確認して下さい。
- 6 改訂記号について
イラスト上に▲印が表示されている部分は、改訂された事を表します。
- 7 著作権所有（無断転載及び無断引用の禁止）
本パーツガイドマニュアルについては、機密保持等その扱いには十分注意して下さい。万一取り扱いを誤った場合には、法律で処罰されることがあります。

CONTENTS

No.	DESCRIPTION	名称	PAGE No.
1	FK-511	F K—5 1 1	P1


INDEX

Parts No.	Page No.
127A90020	1-2
15MY73110	1-11
A161N15800	1-7
A161N15900	1-8
A161N15D00	1-2
A161N15E00	1-2
A161N15F00	1-2
A161N15G00	1-2
A22MH01A1H	1-6
A22MH01C00	1-6
A22MH01D00	1-6
A22MH01H00	1-6
A22MH01K1A	1-6
A22MH01W1H	1-6
A2X0N15A00	1-15
A2X0N15B00	1-17
A4MF131200	1-4
A4MF131201	1-4
A4MF131300	1-1
A4MF131302	1-1
A4MF131400	1-5
A4MF131500	1-3
A4MF131700	1-13
A5C1M92100	1-14
A5C1N15800	1-16
A61FM90300	1-19
A61FM90700	1-20
A61FM90900	1-21
A61FM90C00	1-22
A61FN15900	1-18
V500010047	1-10
V570010057	1-9

FK-511

改訂版 REVISED EDITION	日付 DATE
▲	DECEMBER 2013

P 1

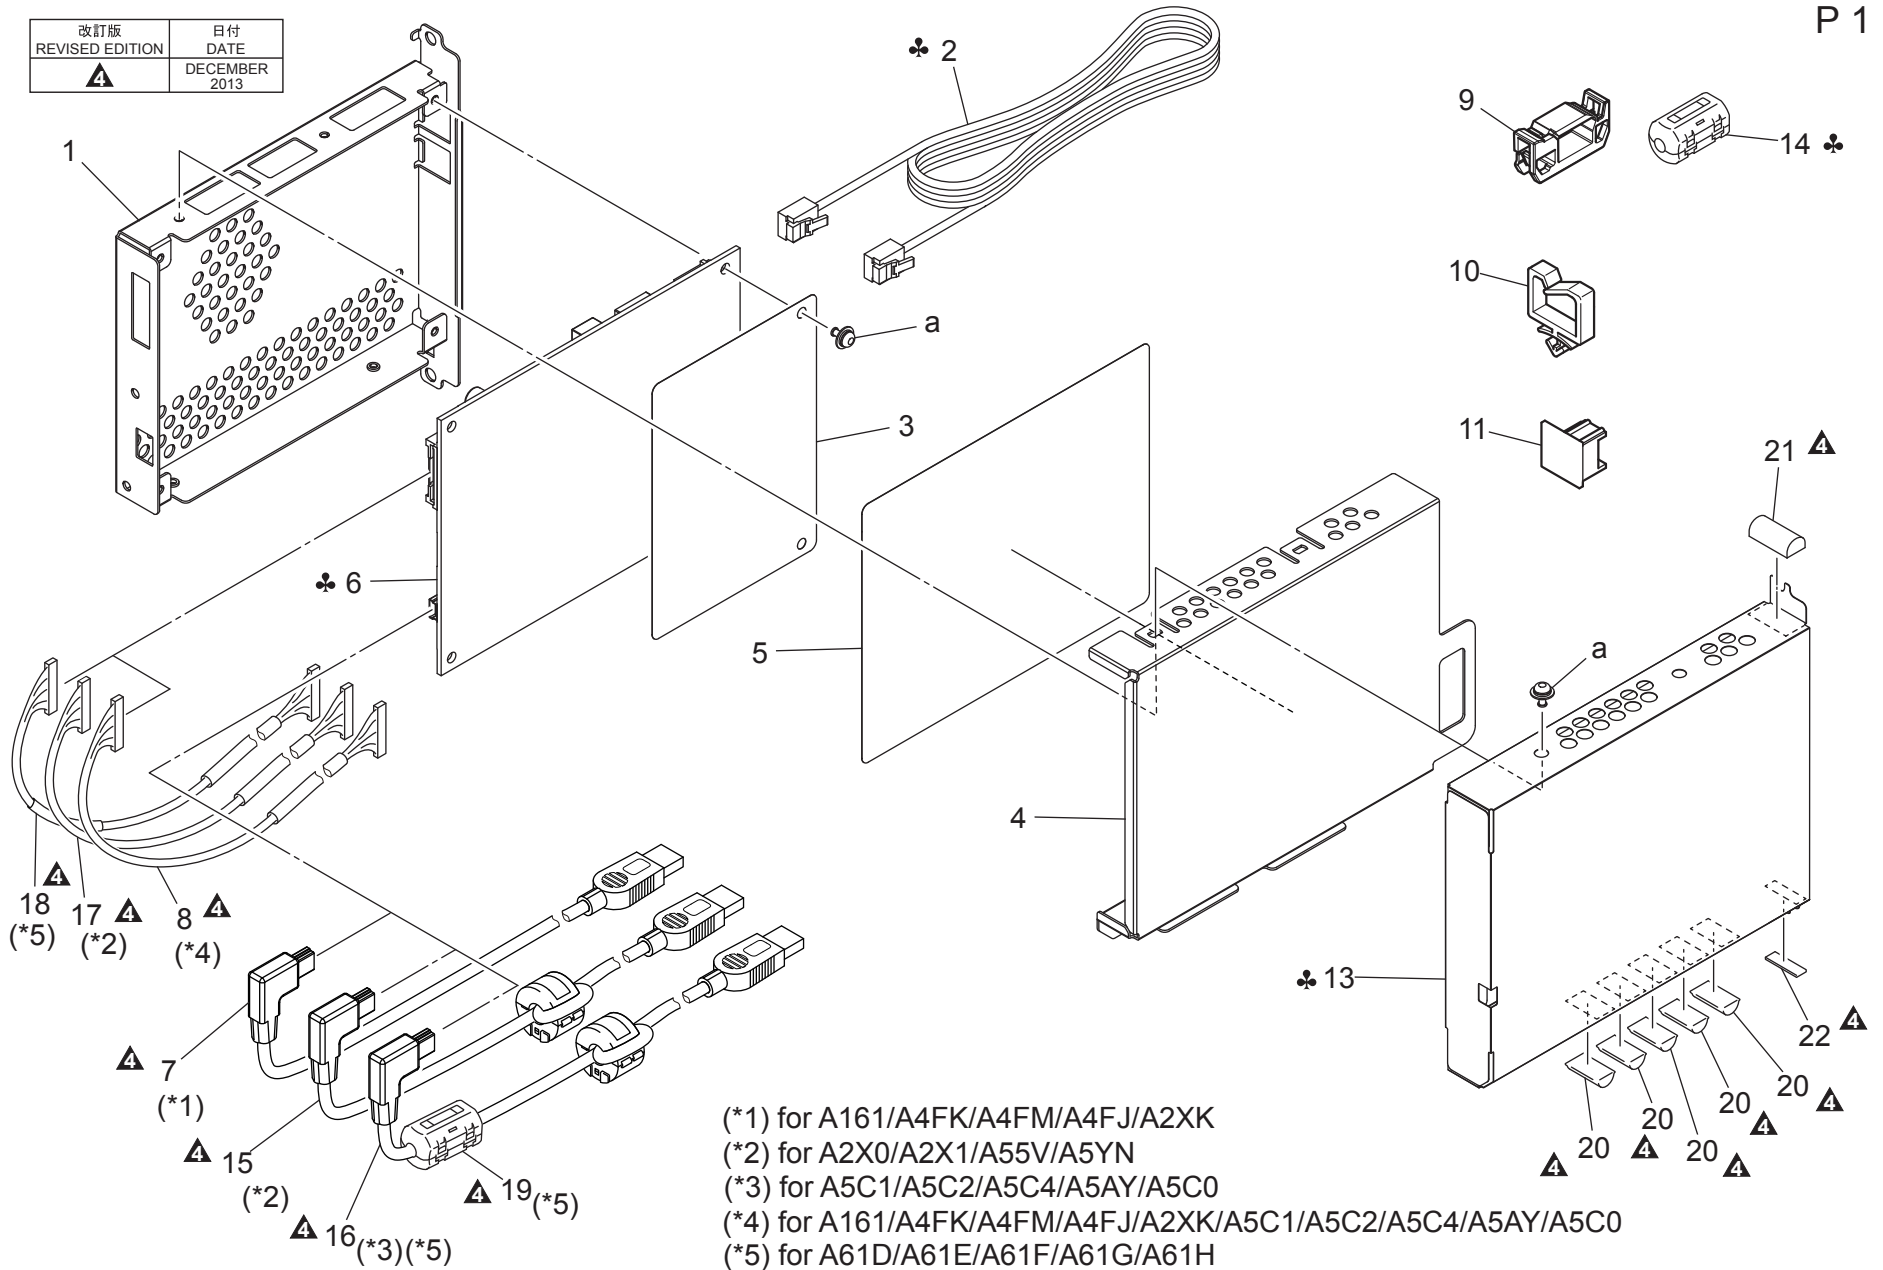

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
1	A4MF131300Old	Cover		D	1	a-V116030603
1	A4MF131302	Cover		D	1	
2	127A90020	MODULAR WIRING 1	A,A1,B,F2,G2(Mexico)	C	1	
2	A161N15D00	Wiring /2	C,D1,E,I,G1,G2,H,J	C	1	
2	A161N15G00	Wiring /2	D3(Australia)	C	1	
2	A161N15E00	Wiring /2	D3(New Zealand)	C	1	
2	A161N15F00	Wiring /2	K	C	1	
3	A4MF131500	Sheet		D	1	
4	A4MF131200Old	Mounting Plate		D	1	
4	A4MF131201	Mounting Plate		D	1	
5	A4MF131400	Sheet		D	1	
6	A22MH01A1H	CONTROL BOARD ASSY	A,A1(Modl No.A4MF-W01)	I	1	
6	A22MH01W1H	CONTROL BOARD ASSY	B,C,D1,D3,E,F2,G1,G2,I,J,K(Model No. A4MF-011/021/041/051/081/091/0E1/0K1)	I	1	
6	A22MH01K1A	CONTROL BOARD ASSY	H(Model No.A4MF-071)	I	1	
6	A22MH01C00	CONTROL BOARD ASSY	A,A1(Model No.A4MF-W02/W03/W04)	I	1	
6	A22MH01D00	CONTROL BOARD ASSY	B,C,D1,D3,E,F2,G1,G2,I,J,K (Model No. A4MF-012/022/023/042/043/052/053/082/083/092/093/0E2/0E3/0K2)	I	1	
6	A22MH01H00	CONTROL BOARD ASSY	H(Model No.A4MF-072/073)	I	1	
7	A161N15800	Interface Cable	(Model No.A4MF-**1/**2)	D	1	
8	A161N15900	Power source Cable	(Model No.A4MF-**1/**2/W04)	D	1	
9	V570010057	Wing Edge Saddle		D	1	
10	V500010047	saddle		D	5	
11	15MY73110	TERMINAL PROTECT COVER		C	1	
13	A4MF131700	Shield Plate	C,D1,D3,E,G1,G2,H,I,J,K (Model No.A4MF-022/023/042/043/052/053/072/073/082/083/092/093/0E2/0E3/0K2)	D	1	
14	A5C1M92100	Ferritecore	C,D1,D3,E,G1,G2,H,I,J,K (Model No.A4MF-022/023/042/043/052/053/072/073/082/083/092/093/0E2/0E3/0K2)	D	1	
15	A2X0N15A00	Interface Cable /2	(Model No.A4MF-**1/**2/W03)	D	1	

Key	Part No.	Description	Destinations	Class	QTY	Standard parts
16	A5C1N15800	Interface Cable /3 インターフェースケーブル /3	(Model No.A4MF-012/ 022/023/042/043/052 /053/072/073/082/08 3/092/093/0E2/0E3/0 K2/W02/W04)	D	1	
17	A2X0N15B00	Power source Cable /2 電源ケーブル /2	(Model No.A4MF-**1/ **2/W03)	D	1	
18	A61FN15900	Power source Cable 電源ケーブル	(Model No.A4MF-023/ 043/053/073/083/093 /0E3)	D	1	
19	A61FM90300	Ferritecore フェライトコア	(Model No.A4MF-023/ 043/053/073/083/093 /0E3)	D	1	
20	A61FM90700	Gasket ガスケット	(Model No.A4MF-023/ 043/053/073/083/093 /0E3)	C	5	
21	A61FM90900	Gasket ガスケット	(Model No.A4MF-023/ 043/053/073/083/093 /0E3)	C	1	
22	A61FM90C00	Gasket ガスケット	(Model No.A4MF-023/ 043/053/073/083/093 /0E3)	C	1	

DESTINATION

Destination No.		Destinations		V	Hz	Model No.
A	A1	JAPAN		100	50/60	A4MF-W01/ W02/W03/ W04
	A2	JAPAN				
B		USA, CANADA		120	60	A4MF-011/ 012
C		EUROPEAN TYPE		220-240	50/60	A4MF-021/ 022/023
D	D1	S.E ASIA TYPE	THAILAND, SRI LANKA, SINGAPORE, MALAYSIA, HONG KONG, PAKISTAN, INDIA, BANGLADESH, INDONESIA	220-240	50/60	A4MF-041/ 042/043
	D3	OCEANIA TYPE	AUSTRALIA, NEW ZEALAND	220-240	50/60	A4MF-051/ 052/053/ 0E1/0E2/ 0E3
E		PHILIPPINES		220-240	50/60	A4MF-041/ 042/043
F	F1	SAUDI ARABIA				
	F2	SAUDI ARABIA		220-240	50/60	A4MF-011/ 012
G	G1	C.S AMERICA		220-240	50/60	A4MF-041/ 042/043
	G2	C.S AMERICA		120	60	A4MF-011/ 012/041/ 042/043
H		TAIWAN		110	60	A4MF-071/ 072/073

Destination No.	Destinations	V	Hz	Model No.
I	JORDAN, LEBANON, SYRIA, SOUTH AFRICA, IRAQ, IRAN, N.YEMEN, CAMEROON, UAE, BAHRAIN, OMAN, QATAR, KUWAIT, KENYA, TUNISIA, IVORY COAST, MOROCCO	220-240	50/60	A4MF-041/ 042/043/ 0K1/0K2
J	CHINA	220-240	50/60	A4MF-081/ 082/083
K	KOREA	220-240	50/60	A4MF-091/ 092/093